



## HOW TO INITIATE A DEEP CLEAN CYCLE IN THE MAYTAG MHN30PN / PD WASHING MACHINES

Enter Service Mode as shown by flashing Display on Front Load Washer screen.

How to enter Service Mode:

**MHN30PD Models:** Insert service access door key, turn, and lift to remove service access door to enter the Set-Up Mode as shown by flashing display.

**MHN30PN Models:** Using only the three bottom Cycle Selector buttons (numbered 1, 2, and 3 from left to right)

1. Press 2 for longer than 2 seconds but less than 10 seconds.
2. Press 1 & 3 together for 2 seconds, then release. Displays **S 3**.
3. Press 1 & 2 together, then release. Displays **S 4**.
4. Press 2 & 3 together, then release. Displays **S 5**.
5. Press 2, then release. Displays "**codE**".
6. Wait at least 2 seconds, but not more than 15 seconds, then press in succession: 3, 2, 1, 3.

*Washer Cleanout Cycle* – With the entire display flashing, this cycle is started by pressing the **BRIGHTS** button.

Use the Washer Cleanout Cycle once a month to keep the inside of the washer fresh and clean.

This cycle uses a higher water level. Use with liquid chlorine bleach to thoroughly clean the inside of the washer. This cycle should not be interrupted.

**IMPORTANT:** Do not place garments or other items in the washer during the Washer Cleanout Cycle. Use this cycle with an empty spin basket.  
Do NOT touch or interfere with the machine in any way during the clean cycle or you will have to start over. Takes approx 45min.